
Appendix D. Foul Water Layout and Construction Details

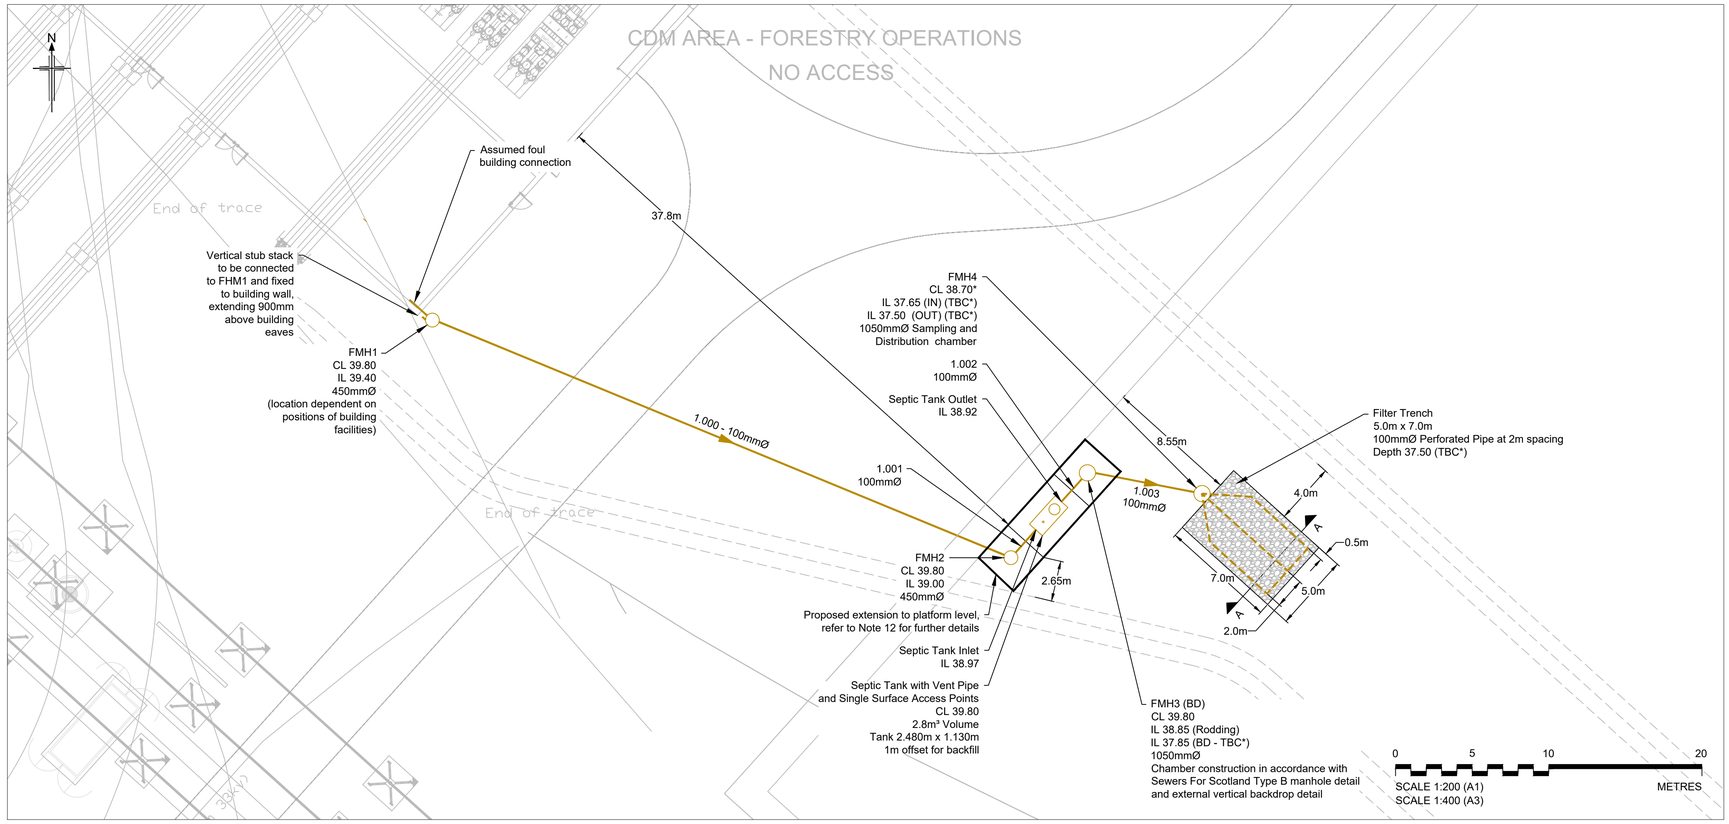


PLAN VIEW
1:200 @ A1


Chamber Number	Chamber Type	Cover Level (m)	Easting (m)	Northing (m)	MH Depth (m)	Manhole Dia. (mm)	Pipe Out Number	Pipe Out Invert Level (m)	Pipe Out Diameter (mm)	Pipes In Number	Pipes In Invert Level (m)	Pipes In Dia (mm)	Comments
FMH1	PVC	39.80	235777.15	808286.25	0.40	450	1.000	39.40	100	Building	39.40	100 (TBC)	Vertical substack to be fitted to FMH1
FMH2	PVC	39.80	235814.93	808270.74	0.80	450	1.001	39.00	100	1.000	39.00	100	Maintenance access to 1.000 from outside HV zone
Tank	N/A	39.80	235817.40	808273.48	See detail	See detail	1.002	38.92	100	1.001	38.97	100	See tank detail
FMH3	Type B SfS	39.80	235819.93	808276.28	1.95	1050	1.003	37.85	100	1.002	38.85	100	Pipe In - backdrop - rodding
										1.002	37.85	100	Pipe in - backdrop - vertical
FMH4	Type B SfS	38.70	235827.41	808274.93	1.20	1050	Perforated (3)	37.50	100 (3)	1.003	37.65	100	Sampling and Distribution chamber

Pipe Number	Pipe Size (mm)	U/S Chamber	D/S Chamber	Length (m)	Fall (1:X)	Pipe Type
1.000	100	FMH1	FMH2	39.940	99.85	PVC
1.001	100	FMH2	Tank Inlet	2.000	66.67	PVC
1.002	100	Tank Outlet	FMH3	2.000	28.57	PVC
1.003	100	FMH3	FMH4	6.570	32.85	PVC

CHAMBER AND PIPE SCHEDULE

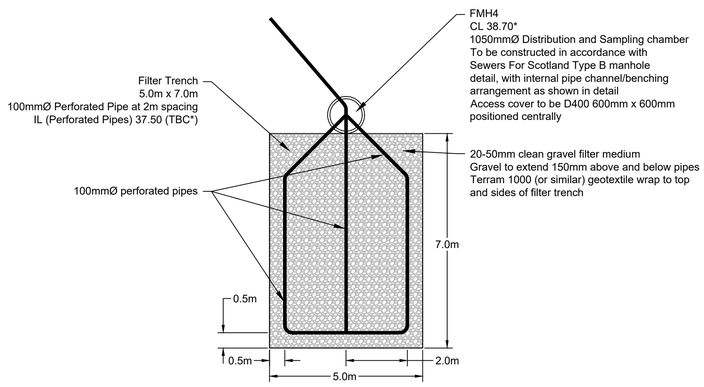

PLAN VIEW - FILTER TRENCH
1:100 @ A1

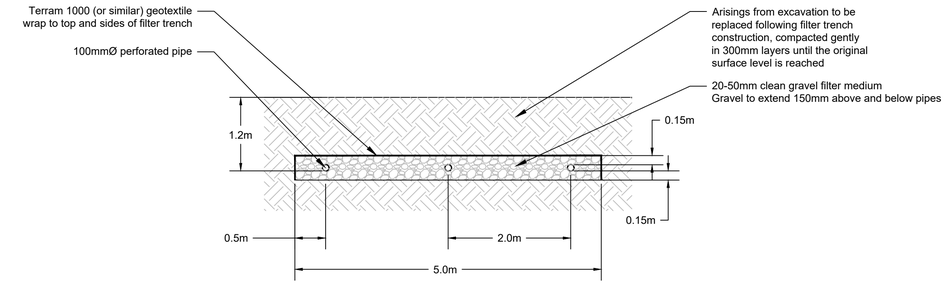

SECTION A-A - FILTER TRENCH
1:50 @ A1

KEY

- Proposed Foul Carrier Pipe
- Proposed Foul Chamber
- Proposed Perforated Pipe
- Proposed Filter Trench
- Proposed Platform Level Extension

NOTES

1. Do not scale from this drawing.
2. All dimensions are in metres, unless otherwise stated.
3. The Contractor shall identify and locate all existing/proposed underground/overground utilities within the works area prior to construction commencement, and develop appropriate method statements and risk assessments to address utility constraints during the construction stage.
4. All proposed underground pipework, excluding perforated filter trench pipes, to have Class Z bedding and surround applied in accordance with Sewers For Scotland standard bedding details.
5. All pipe trench backfilling operations following pipe laying are to be in accordance with Sewers For Scotland standards.
6. FMH3 (BD) and FMH4 are to be constructed in accordance with Sewers For Scotland Type B manhole details but with a reduced 1050mm chamber size. Access covers on aforementioned chambers shall be 600mm x 600mm D400 class, centrally positioned.
7. FMH4 to also be a sampling chamber (150mm invert drop) modified to suit required depth.
8. FMH1 and FMH2 to be PVC 450mmØ unit modified to suit required depth, with manufacturer-supplied access cover to D400 class. Chamber to be installed in accordance with the manufacturer's instructions.
9. The septic tank used in the design is a Kingspan GST028 GAMMA Septic Tank with 2.8m³ of volume and an inlet invert trimmed to 800mm. Should the Contractor wish to utilise a different tank supplier, they shall consult with the Designer to ensure the suitability of the tank and inlet/outlet invert levels. The Contractor shall install the tank in accordance with the Manufacturer's tank drawings and installation instructions (see Kingspan Drawing DS1267P and Kingspan 017906 GAMMA Septic Tanks Installation & Maintenance Guidelines documentation supplied supplemental to this drawing).
10. Septic tank anchoring to be either concrete surround or anchor blocks and strapping with pea gravel backfill, installed in accordance with manufacturer instructions (see Kingspan Drawing DS1267P and Kingspan 017906 GAMMA Septic Tanks Installation & Maintenance Guidelines documentation supplied supplemental to this drawing). At the time of the design being developed, groundwater levels in the proposed tank area were unknown, thus the anchoring solution should be discussed and agreed with the Client (SSE) prior to construction commencement.
11. Septic tank access cover and venting pipework shall be tank manufacturer-supplied components and installed in accordance with manufacturer instructions. Access covers to be D400 loading class.
12. An extension to the platform level is required to keep FMH2, the Septic Tank and FMH3 at a cover level of 39.8mAOD. This will facilitate improvements to the Septic Tank maintenance regime, whilst keeping the outlet invert level of the Septic Tank above the maximum flood level of 38.9mAOD.

*Ground levels used in the foul design are to be validated by the Contractor prior to construction commencement. Should variations to levels shown on the drawing be apparent, the Contractor is to consult the Designer.

P02	28-11-23	REVISED SEPTIC TANK LOCATION FOLLOWING SSE COMMENTS	SE	AW	AW	MD
P01	09-11-23	FIRST ISSUE	RG	AT	AT	MD
Rev	Rev. Date	Purpose of revision	Orig	Check'd	Rev'd	Apprv'd

Jacobs
95 Bothwell Street, Glasgow. G2 7HX
Tel:+44 (0) 141 243 8000 Fax:+44(0)141 226 3109
www.jacobs.com

Client: Scottish & Southern Electricity Networks TRANSMISSION

Project: FORT AUGUSTUS SUBSTATION PLATFORM EXTENSION

Drawing title: FOUL DRAINAGE DESIGN

Drawing status	FOR INFORMATION	Suitability SO
Scale	See Drawing	DO NOT SCALE
Jacobs No.	B2413736	Rev P02
Client No.	9605	

Drawing number: B2413736-JAC-HDG-PD-DE-CI-002

© Copyright 2023 Jacobs U.K. Limited. The concepts and information contained in this document are the property of Jacobs. Use or copying of this document in whole or in part without the written permission of Jacobs constitutes an infringement of copyright. Limitation: This drawing has been prepared on behalf of, and for the exclusive use of Jacobs' Client, and is subject to, and issued in accordance with, the provisions of the contract between Jacobs and the Client. Jacobs accepts no liability or responsibility whatsoever for, or in respect of, any use of, or reliance upon, this drawing by any third party.

Notes:


1. This drawing is for 'Dimensional Information' only. It is essential that this drawing is read in conjunction with the 'Installation Guidelines' supplied with the unit.
2. All pipe connections are Ø110mm PVCu.
3. Additional ventalation can be achieved on the incoming drain, via a stack pipe. Position to suit specific site conditions.
4. Confirm with local building regulations if additional venting is required.
5. Tank has a trimmable Inlet Invert from 500 to 1000mm. Neck can be trimmed at 100mm increments to required Invert. Refer to Drawing DS1261P.
6. Keys supplied to open th epedestrian duty cover latches.
7. **Pea-Shingle backfill is reliant on use of correct strapping and anchoring.
8. Rodding access to be extended to ground level and suitable cover fitted (by others).


Tank Dimensional Table

Unit	Storage Volume (Ltr)	Dim 'A' (mm)	Dim 'B' (mm)	Dim 'C' (mm)	Dim 'D' (mm)	Dim 'E' (mm)	Dim 'F' (mm)	Dim 'G' (mm)	Dim 'H' (mm)	Dim 'J' (mm)	Tank Weight
GST028SzGK	2800	500-1000	1255	550-1050	1205	2480	1130	1450	735	2255	240 Kgs
GST040SzGK	4000	500-1000	1255	550-1050	1205	3360	1215	1450	735	2255	300 Kgs

Strapping Positions

Unit	1	2	3	4
GST028TzGK	315mm	460mm	460mm	315mm
GST040TzGK	315mm	900mm	900mm	315mm

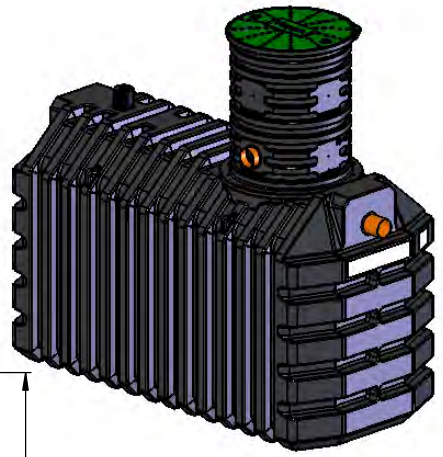

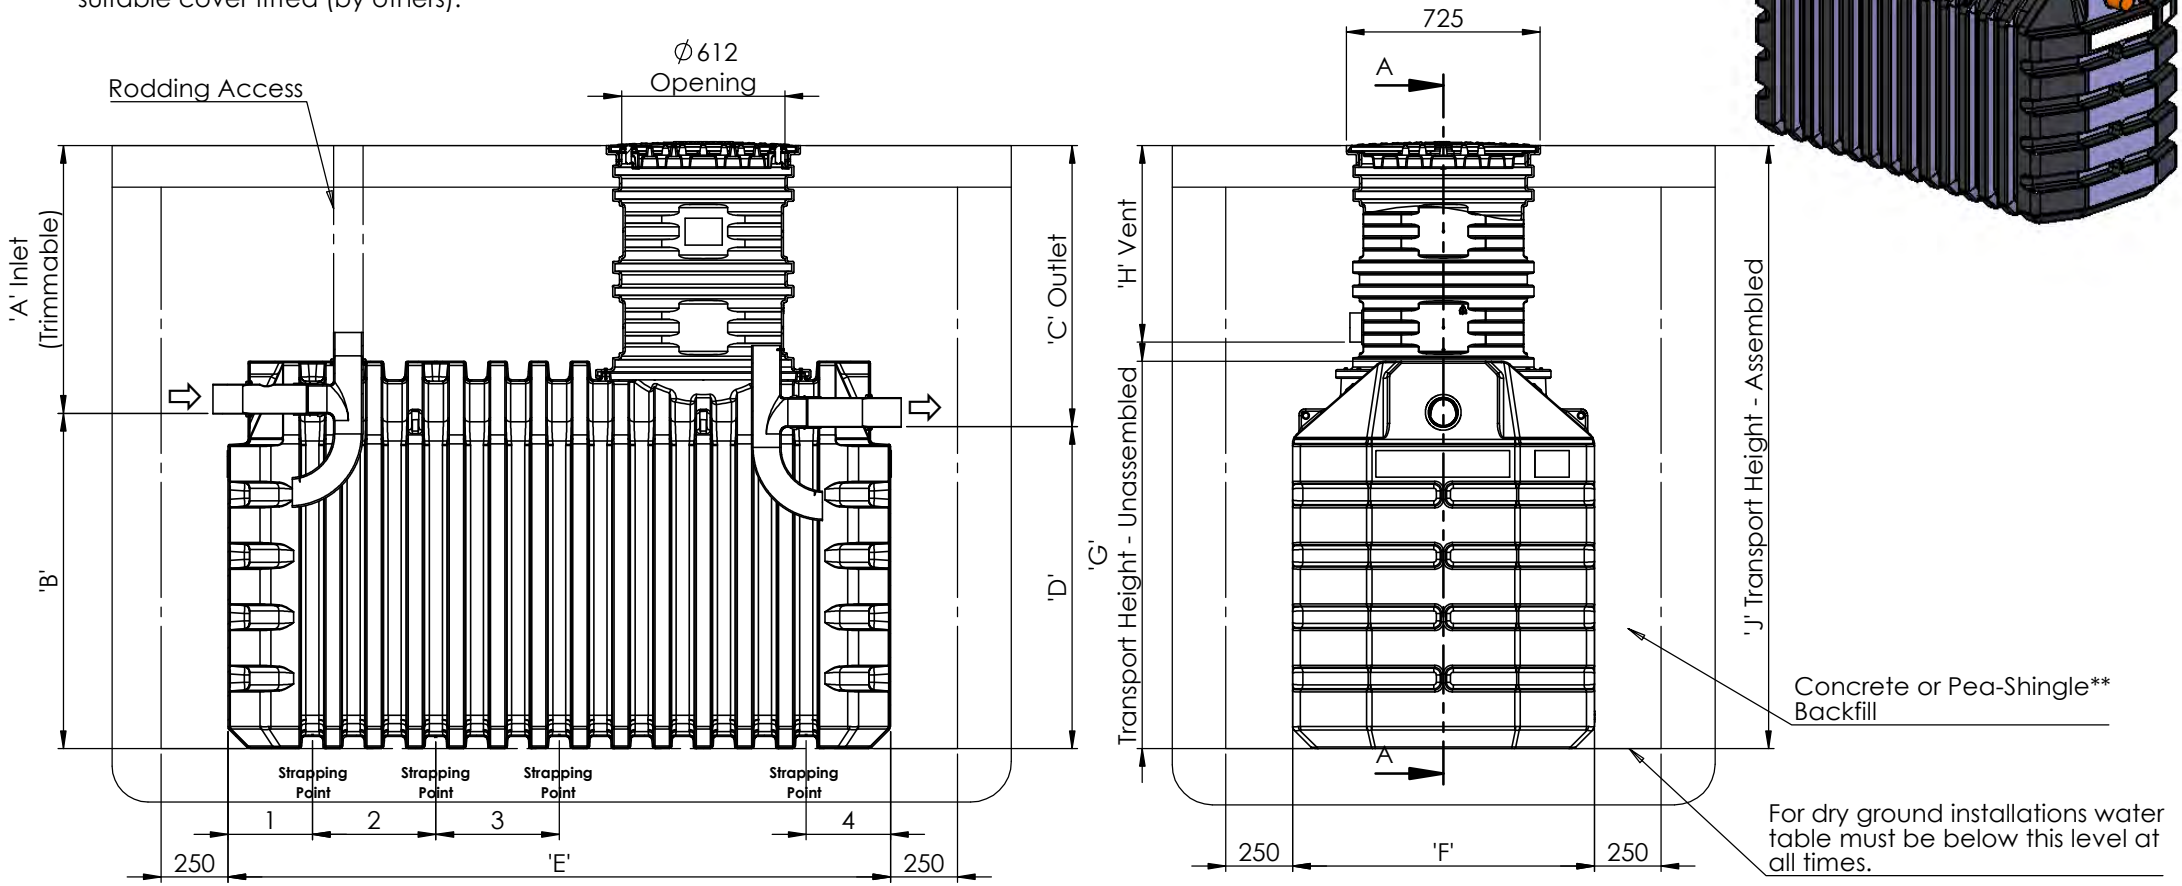

Please check with Kingspan Environmental that this drawing is the latest issue

Issue	Date	Drawn by	Approved by	Description
02	19/06/15	JMcM		CC1252
01	30/04/15	JMcM		Initial Issue

Material : Various	Tolerance :
Finish :	Thickness : n/a
Weight : 125.58 Kg Kgs	Surface Area :

Drawing : DS1267P

GAMMA Sales Drawing - S.Stage, Gravity

All dimensions in mm

Scale: Not to scale

U:\engineering\Engineering Projects\942A -Sweden Septic & Treatment Plant\Drawings\Sales Drawings\DS1267P

Kingspan Environmental reserve the right to alter the details of this drawing without prior notice.
This drawing is copyright and may not be reproduced or used without the written permission of Kingspan Environmental.

Kingspan Environmental

017906
GAMMA Septic Tanks
Installation & Operation Guidelines

Kingspan Environmental

Kingspan Environmental Service Contact Numbers:

UK: 0844 846 0500
NI: +44 283025 4077
IRL: +44 283025 4077
NOR : +47 22 021 920

Enclosed Documents

DS1259P	**GAMMA Septic Tank Sales Drawing – Gravity Discharge – Twin Stage**
DS1260P	**GAMMA Septic Tank Sales Drawing – Pumped Discharge**
DS1267P	**GAMMA Septic Tank Sales Drawing – Gravity Discharge – Single Stage**
DS1322P	**2000L GAMMA Septic Tank Sales Drawing - Gravity Dis- Single Stage**
DS1323P	**2000L GAMMA Septic Tank Sales Drawing – Gravity Dis- Twin Stage**
DS1324P	**2000L GAMMA Septic Tank Sales Drawing – Pumped Discharge**
DS1261P	**GAMMA Septic Tank Neck Trimming Details**
DS1262P	**GAMMA Septic Tank Isolator Wiring Diagram**
DS1268P	**GAMMA Infiltration Pipework Layout Drawing**



HEALTH AND SAFETY

These warnings are provided in the interest of safety. You must read them carefully before installing or using the equipment.

It is important that this document is retained with the equipment for future reference. Should the equipment be transferred to a new owner, always ensure that all relevant documents are supplied in order that the new owner can become acquainted with the functioning of the equipment and the relevant warnings.

Installation should only be carried out by a suitably experienced contractor, following the guidelines supplied with the equipment.

A qualified electrician should carry out electrical work – Pumped Discharge Unit Only.

Sewage and sewage effluent can carry micro-organisms harmful to human health. Any person carrying out maintenance on the equipment should wear suitable protective clothing, including gloves. Good hygiene practice should also be observed.

Covers must be kept locked.

Observe all hazard labels and take appropriate action to avoid exposure to the risks indicated.

The correct ongoing maintenance is essential for the proper operation of the equipment. Service contracts are available and recommended. Please contact our Sales department for details of your local service provider.

Should you wish to inspect the operation of the equipment, please observe all necessary precautions, including those listed below, which apply to maintenance procedures.

Ensure that you are familiar with the safe working areas and accesses.

Ensure that the working area is adequately lit.

The power supply to the equipment should be isolated at the main RCD - Pumped Discharge Unit Only.

Take care to maintain correct posture, particularly when lifting. Use appropriate lifting equipment when necessary. Keep proper footing and balance at all times. Avoid any sharp edges.

Desludging should be carried out by a licensed waste disposal contractor holding the relevant permits to transport and dispose of sewage sludge. The contractor must refer to the desludge instructions contained in these guidelines.

Our GAMMA Septic Tanks are made from high quality Polyethylene. Our nationwide network of stockists ensures prompt delivery and complete after sales service to every customer.

WHY YOU CAN INSTALL OUR TANKS WITH CONFIDENCE:

- They are robust, with high impact resistance, and can withstand all common chemicals they are likely to encounter.
- Our Tanks are trouble-free. No chemicals are required for bacterial action to take place.
- Our Tanks are strong, easy to move and simple to install. Full installation instructions are supplied with every tank.
- Our modern design means that access for desludging is easier through the wide neck.
- Our Septic Tanks come in capacities of 2000 litres (**Scandinavia Only**), 2800 litres (620 gallons), 3500 litres (775 gallons) & 4000 litres (880 gallons) and meet all the requirements of the Water Act Consent Regulations and Building Control Regulations in Great Britain and Northern Ireland.
- All our Tanks carry a 12 month warranty from date of delivery.

Unit	Storage Volume (Litres)	Standard Overall Height (mm)	Standard Inlet Invert (mm)	Standard Outlet Invert (mm)	Length (mm)	Width (mm)
GST020SzGK	**2000**	**1265 - 1765**	**500-1000**	**550-1040**	**3000**	**1180**
GST028SzGK	**2800**	**1755 - 2255**	**500-1000**	**550-1050**	**2480**	**1130**
GST035SzGK	**3500**	**1755 - 2255**	**500-1000**	**550-1050**	**3000**	**1180**
GST040SzGK	**4000**	**1755 - 2255**	**500-1000**	**550-1050**	**3360**	**1215**

BEFORE YOU BEGIN

In Great Britain and Northern Ireland you must have approval to discharge before you install a Septic Tank. You must therefore submit plans of the location of both the tank and soakaway layout to your Local Authority, who may also be able to offer you advice if required.

Our GAMMA Septic Tanks comply with the principles set down in BS 6297:2007. The design also meets all the requirements of both the Water Act Consent and Building Control Regulations in Great Britain and Northern Ireland.

WHAT ABOUT GROUND CONDITIONS?

Prior to installation care should be taken to establish the depth to the water table and land drain facilities as ground conditions will determine the type of backfill materials to be used. In dry free draining soils where the ground is dry all year round i.e. the water table never rises above the base of the tank then use method of installation for DRY GROUND.

In clays, silts, heavy ground or badly drained ground where the water table rises above the base of the tank use method of installation for WET GROUND.

WHERE SHOULD I SITE THE SEPTIC TANK?

British Standard code of practice BS EN 12566-1 recommends that septic tanks should not be closer than 7 metres from a dwelling. The outlet from the tank should be well away from any source of water supply. Care should be taken to site the tank. Roads, driveways and vehicles should not be permitted

within a distance equal to the depth of the unit, unless suitable structural protection is provided to the installation, to avoid damage to the tank structure.

Don't forget that there must be access for service vehicles during installation and desludging.
If the tank can only be installed where it will be subjected to a traffic load, then contact our sales team for details of any special requirements.

HOW SHOULD I HANDLE THE TANK?

Care should be taken when handling the Septic Tank. The tank should be lifted using a rope or sling passed through the lifting points provided on the tank. The tank must be carefully lifted from the delivery vehicle and set down on to level ground. Do not roll the tank off the delivery vehicle. Carry out an inspection for any damage before accepting the tank, and inspect again prior to installation, paying particular attention to the inlet and outlet pipes. During storage of the tank on site do not allow it to rest on these pipes at any time. The tank should always be filled with clean water during backfilling. It is desirable to temporarily cover all openings in the tank to prevent the ingress of debris during installation.

WHAT ABOUT EXCAVATION

INSTALLATION SHOULD ONLY BE CARRIED OUT BY A COMPETENT CONTRACTOR.

The septic tank is supplied with a standard neck extension giving an Inlet Invert of 500-1000mm from the top of the manhole cover to the bottom of the inlet pipe.
Excavate a hole according to the table below. Normal safety precautions must be adopted during excavation. Excavate a trench for the inlet and outlet pipework noting; the inlet invert selected, and that the outlet pipe is 50mm lower than the inlet pipe.

If the excavation is in unstable ground, take particular precautions to avoid a collapse of the sides of the excavation. Guidance on excavation to these depths and the safety measures required are given in BS6031, BS8000: Part 1 and HSE Construction Summary Sheet.
Make sure that any water collecting in the hole is pumped out during installation.

Tank Excavation Dimension

Tank Model	**Standard Overall Height** (mm)	**Length** (mm)	**Width** (mm)
GST020SzGK	1765	3500	1680
GST028SzGK	2255	2980	1630
GST035SzGK	2255	3500	1680
GST040SzGK	2255	3860	1715

WHAT ABOUT DESLUDGING

The tank has been specially designed to allow easy access for ease of cleaning when required. The tank is desludged in the usual way by suction tanker.

When desludging, which should be undertaken at least once a year, care should be taken to avoid damage to the tank by the hose nozzle. The tank should not be emptied completely, so that a residual amount is left to provide the micro-organisms to break down the sewage. The tank should be refilled with water.

HOW SHOULD I INSTALL THE TANK?

There are basically two ground types:

1. Dry ground conditions – In light, totally dry, free draining soils where the water table does not rise above the base of the tank;

2. Wet ground conditions – In clay or heavy soils where the water table can rise above the base of the tank.

INSTALLATION PROCEDURE

Please see installation drawings provided.

DRY GROUND CONDITIONS

1. Excavate the site allowing for a minimum clearance on all sides and base of the unit of 250mm and level the base. If levelling pegs are used they should only be placed at the corners of the hole, well away from the septic tank.

2. Ensure that the hole is kept dry. Should any rain or surface water collect in the hole, this should be pumped out.


3. A base of at least 200mm of lean mix concrete should be provided.

4. Lower the septic tank into the hole using a rope sling through the lifting points provided on the tank. Under no circumstances should the sling be attached to the inlet pipe or outlet pipe.

5. Position the inlet pipe in line with the incoming drain. Note that the inlet and outlet pipes are clearly marked on the tank. The unique profile of the base will help to level the tank, but make sure the tank is in the truly upright position in order to maintain the 50mm head difference between the inlet and outlet pipes.

6. After any concrete in the base has taken up its initial set (usually after one day), ballast the tank by putting approximately 0.5m depth of water into it.

   IMPORTANT NOTE: When adding water to **Twin Stage** or **Pumped Discharge** fill via the **Outlet chamber** as noted below. The water can overflow through the **Transfer Hole** into the **First Stage Chamber.**

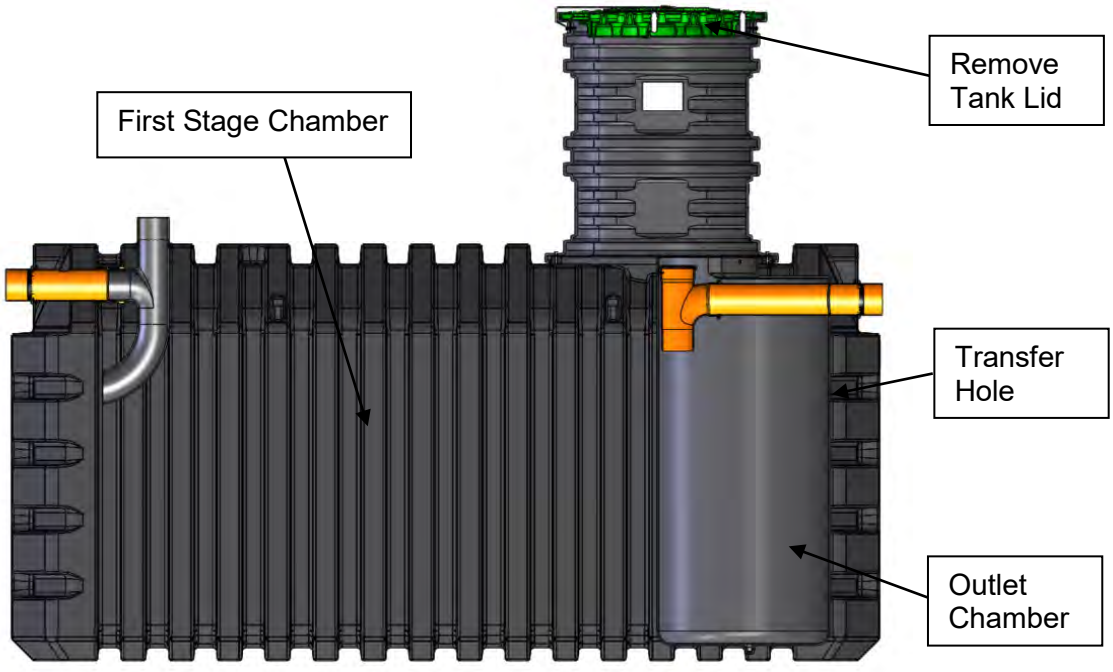

7. Backfill the space around the tank with pea gravel or similar material (3-8mm). The backfill should be free from organic material, large stones, bricks or sharp objects.

   Backfilling should be carried out in layers making sure that voids are not left under and around the sides of the tank and that there are no localised stress concentrations. It is most important that the installer progressively fills the tank with water to the level above the backfill in order to stabilise pressures on the tank.

8. Remove any temporary covers, and connect up the tank inlet and outlet pipe to your own pipework. Do not use reducers.

9. Backfilling can now proceed up to ground level.

10. Venting can be provided through a dedicated 110mm vent socket arrangement on the tank, additional venting can be provided via the inlet vertical pipe connections, if not used please blank off with socket and blanking cap..

WET GROUND CONDITIONS OR BADLY DRAINED GROUND

The installation procedure for wet ground conditions is similar to that for dry ground conditions, though the following additional points must be considered:

1. A lean mix concrete base of minimum depth 200mm should be provided. In wet ground conditions the installer should ensure that the base is adequate to support the weight of the septic tank and its contents. If the base of the excavation is unstable i.e. running sand or similar, excavate an additional 250-300mm below the concrete levels and fill up with compacted hard-core. Place a sheet of polythene over the hard-core and up the sides of the excavation before putting in the concrete cradle.

2. Ensure that the water is pumped from the excavation during installation and that during backfilling the water is conveyed away from the hole.

3. Backfilling material should be lean mix concrete.

4. Ensure that the concrete is not too wet and that it is tamped in around the tank. Do not use a vibrating poker.

5. Only back fill with concrete up to the top of the body sphere. Do not surround the pipework with concrete.

6. It is most important that the installer progressively fills the tank with water to a level above the backfill in order to stabilise pressure on the tank.

The Concrete Specification is a *general* specification, not a site specific installation design.

GENERAL CONCRETE SPECIFICATION IN ACCORDANCE WITH BS EN 206-1 (BS 8500-1)		
TYPE OF MIX		(DC) DESIGN
PERMITTED TYPE OF CEMENT		BS 12 (OPC): BS 12 (RHPC): BS 4027 (SRPC)
PERMITTED TYPE OF AGGREGATE (coarse & fine)		BS 882
NOMINAL MAXIMUM SIZE OF AGGREGATE		20 mm
GRADES:	C25 /30 C25 /30 C16 /20	REINFORCED & ABOVE GROUND WITH HOLDING DOWN BOLTS REINFORCED (EG. FOR HIGH WATER TABLE) UNREINFORCED (NORMAL CONDITIONS)
MINIMUM CEMENT CONTENT	C30 C20	270 - 280 Kg/M^3 220 - 230 Kg/M^3
SLUMP CLASS		S1 (25mm)
RATE OF SAMPLING		READY MIX CONCRETE SHOULD BE SUPPLIED COMPLETE WITH APPROPRIATE DELIVERY TICKET IN ACCORDANCE WITH BS EN 12350-1
NOTE: STANDARD MIXES SHOULD NOT BE USED WHERE SULPHATES OR OTHER AGGRESSIVE CHEMICALS EXIST IN GROUND WATER		

INSTRUCTIONS FOR TRIMMING OF ACCESS NECK

Please see attached Neck trimming instructions drawing DS1261P provided.

ELECTRICAL INSTALLATION – PUMPED DISCHARGE UNIT

It is imperative that the electrical installation of this equipment is entrusted to a competent qualified electrician working to the latest IEE regulations.

It is not possible to state a specific installation configuration that would suit all sites. The selection of current protection devices must remain the responsibility of the installer who should select a suitable cable and current overload protection, taking into account the distance from the power source to the unit and any other relevant factors. (In many cases steel wire armoured (SWA) cable, minimum 1.5 sq mm will be suitable).

When installing the electrical supply to the unit, the following points should be considered:

The electric power supply to the tank should be by means of a dedicated circuit with isolation and protection devices consistent with the requirements for fixed equipment and in accordance with the latest regulations of the Institute of Electrical Engineers.

This power supply should be independent of all other household protection devices other than the supply authority's main fuse and that provided specifically for the power supply. In particular, earth leakage devices provided for normal domestic protection must not form part of the supply circuit to the tank.


An earth leakage circuit breaker should be incorporated in the supply to the unit. A device with 30mA minimum trip current is recommended.

An appropriate Isolator IP65 rated (supplied by Contractor) needs to be mounted externally at a point where it is easily accessible.


The power supply cable should connect to the IP65 rated isolator socket mounted externally. Any terminal shrouds removed during the connection of cable cores must be replaced afterwards. A separate duct or conduit should be provided by others.

The pump power cable located in the tank needs to be connected to the Isolator as per the wiring detail below;

Isolator Wiring Diagram – Pumped Discharge System – Sales Drawing - DS1262P

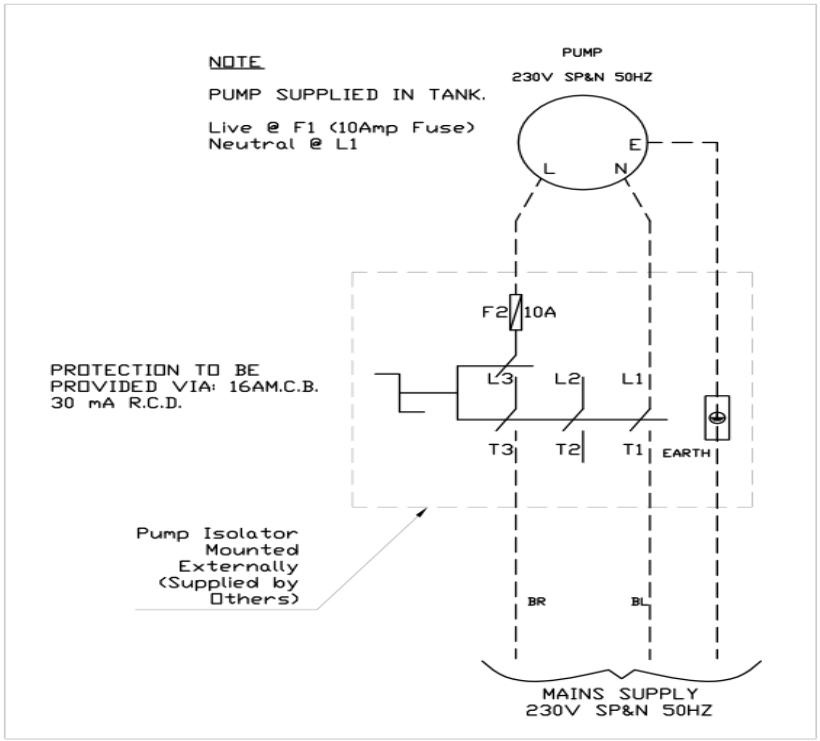

IPS PUMPING HEIGHT V's DISTANCE CHART

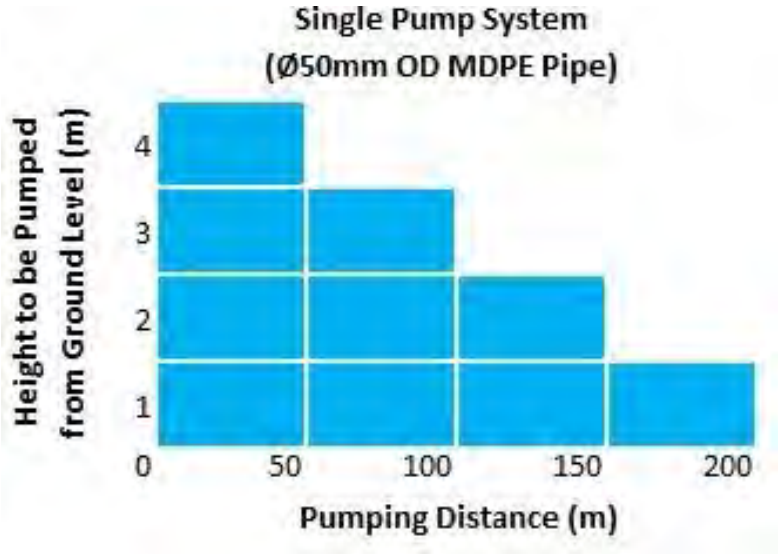

WARRANTY

Taken from 'Kingspan's Terms & Conditions of Sale'

The company will replace or, at its option, properly repair without charge any goods which are found to be defective and which cause failure in normal circumstances of use within a period of twelve months from the date of delivery.

This warranty is conditional upon:

(a) the Buyer notifying the Company of any claim within Seven days of the failure becoming discernible.
(b) the Company being allowed a reasonable opportunity to inspect the goods so as to confirm that they are defective.
(c) the goods not having been modified, mishandled or misused and being used strictly in accordance with any relevant instructions issued by the Company.

The Company's liability under this Clause is limited to the repair or replacement of the defective goods, and does not cover costs of transport, installation or associated site costs, if applicable.

The Company's liability to replace or repair the goods is in lieu of and excludes all other warranties and conditions, and in particular (but without limitation) the Company shall have no liability of any kind for consequential loss or damage.

For any further advice, please contact us.

A Warranty Form is included in this package, to register your unit for Warranty. Please complete ALL sections of the Form, and return it at your earliest convenience.

Also within this package is a Notice, describing the necessary maintenance of the plant in use. This should be fixed within the building.

NOTICE:



GAMMA SEPTIC TANK

The foul drainage from this property discharges to a Septic Tank and an irrigation system / soak-away.

The tank requires monthly inspections of the outlet chamber or sample chamber to observe that the effluent is free-flowing and clear. The soak-away should also be inspected regularly.

The septic tank requires emptying at least once every 12 months by a licensed contractor.

THE OWNER OF THE PROPERTY IS LEGALLY RESPONSIBLE FOR ENSURING THAT THE SYSTEM DOES NOT CAUSE POLLUTION, A HEALTH HAZARD OR A NUISANCE.

We recommend that a separate log is kept of all service visits, the log should detail the date and any action taken, e.g. Regular maintenance service and de-sludge volume removed.

This notice should be fixed by the owner within the building alerting current and future owners to the maintenance requirement. (Building regulation H2 (1.57)

Please contact Kingspan Environmental Service on +44 (0) 844 846 0500 to arrange a maintenance service or to request replacement operating instructions.

CE

Kingspan Environmental
College Road North
Aston Clinton
Aylesbury
Buckinghamshire
HP22 5EW
United Kingdom

17

EN 12566-1 : Small wastewater treatment plant: prefabricated septic tanks

Polyeythlene Septic Tank

GAMMA Septic Tanks 2000L, 2800L, 3500L & 4000L

Nominal Capacity	Single Stage: 2.0m³ (2,041 Ltrs) Twin Stage: 2.0m³ (2,133 Ltrs)
	Single Stage: 2.8m³ (2,843 Ltrs) Twin Stage: 2.8m³ (2,829 Ltrs)
	Single Stage: 3.5m³ (Ltrs) Twin Stage: 3.5m³ (Ltrs)
	Single Stage: 4.0m³ (4,010 Ltrs) Twin Stage: 4.0m³ (4,010 Ltrs)
Watertightness (Water Test)	Passed
Crushing Resistance (Pit Test) (for wet conditions also)	Passed
Hydraulic Efficiency	99.83% (Single Stage 2000L) 99.91% (Twin Stage 2000L)
	99.81% (Single Stage 2800L) 99.97% (Twin Stage 2800L)